General Warranty Conditions

The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with a similar product should the model or colour no longer be available. Any replacement will be for the failed item only, not a complete set. The original warranty period is not extended in the event of a repair, refinish or replacements.

In the event of a failure, it is the customer's responsibility to return the item to the store of purchase along with a copy of the receipt. LG Outdoor will confirm that the customer has registered their warranty. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure to observe reasonable care, maintenance and assembly instructions for both furniture and hardware.

This product comes with a Limited Warranty which covers the following:

* 3 Year Limited Warranty - Aluminium Frames - which excludes damage to the finish caused by corrosion, scratching, pitting, fading or oxidisation

For all other components not covered by the above a standard 12-month warranty will apply

To register your warranty please visit Igoutdoor.co.uk/furniture-warranty within 28 days of purchase

Page 4 of 4



Dewmead Farm
New Inn Road
Hinxworth
SG7 5HG
salessupport@leisuregrow.com



ASSEMBLY AND CARE INSTRUCTIONS

Turin Side Table



This is an important document.

Please retain for future reference.

Please keep your receipt of purchase. Please note we are unable to process any warranty claim without proof of purchase.

QSF 227 TIN19 V1 08-17

Care Instructions

- This tabletop is made from hand-brushed, wood-effect aluminium. While it has been treated with a protective lacquer during production, please avoid contact with sharp or abrasive objects
- Do not sit or stand on this table
- We recommend cleaning this product periodically with warm, soapy water and a cloth or non-abrasive brush. Do not use harsh or abrasive chemicals
- To keep your product looking its best, we would always recommend covering with an LG
 Outdoor Furniture Cover when not being used for longer periods. Throughout the winter
 months either bring indoors or cover as above. Failure to do so may invalidate your warranty

Necessary Tools Supplied



You will find a pack within this box tied to a red ribbon which contains the fittings.

WARNING – the fittings pack contains **SMALL ITEMS** which are a potential choking hazard and should be kept away from children at all times.

Assembly Requirements

Number of people required to assemble	¥
Approximate Assembly time	15 minutes

Read this leaflet in full before commencing assembly.

Page 2 of 4

Part List Supplied

Ref	Part	Image	Qty	Ref	Part	Image	Qty
А	TABLE TOP		1	F	INNER HEXAGONAL SCREW(M6*20)		4
В	FRONT LEG	7	1	G	INNER HEXAGONAL SCREW(M6*25)		4
С	BACK LEG	7	1	Н	HEXAGONAL BOLT CAP(M6)	0	8
D	CONNECT TUBE		2	I	ALLEN KEY		1
E	METAL WASHER(D6)	0	8	J	TOUCH UP PAINT		1

Assembly Instructions



PLEASE ENSURE ALL FIXINGS ARE LEFT LOOSE DURING ASSEMBLY BUT ARE SECURELY TIGHTENED UPON COMPLETION.