



Assembly Instructions

Buxton Square Bistro Table

(Product Codes: 61221053)

**PLEASE RETAIN THIS DOCUMENT ALONG WITH YOUR
PROOF OF PURCHASE FOR FUTURE REFERENCE**















Congratulations on your recent purchase of your beautiful Hartman furniture. We hope it brings you countless special moments with friends and family for many years to come.

Please follow these simple steps to build your furniture. We also have a very useful video available online to assist with the assembly, please visit www.hartmanuk.com


TOP TIPS

- Please read these instructions carefully before assembly, for further assistance please view our assembly video online for an easy step by step demonstration.
- Aluminium is a soft metal and over tightening may strip the thread or break the part, please loosely assembly your furniture before tightening to secure.
- Please **do not** use power tools, only use the tools provided in the bolt pack.
- Please allow 1 hour for assembly.
- This furniture can be assembled with **1** person; however, you may need someone to assist you when turning the furniture over into position.

PARTS LIST

| Components | | | | | Fixings | | | | |
|------------|---|-------------|-----|-----------|------------|---|----------------------|-----|----------|
| Parts List | Parts Picture | Description | Qty | Part No. | Parts List | Parts Picture | Description | Qty | Part No. |
| A |  | Table Top | | 61221053A | D |  | M8x40 Allthread Bolt | | 1000162 |
| B |  | Centre Ring | | 61221053B | E |  | M8 Flat Washer | | 1001162 |
| C |  | Table Leg | | 61221053C | F |  | M8 Lock Washer | | 1002162 |
| | | | | | G |  | M8 Nut | | 1003162 |
| | | | | | H |  | M8 Nut Cap | | 1004162 |
| | | | | | I |  | M6x35 Bolt | | 1006162 |
| | | | | | J |  | M6 Flat Washer | | 1006162 |
| | | | | | K |  | M6 Lock Washer | | 1007162 |
| | | | | | L |  | M6 PVC Cover | | 1008162 |
| | | | | | M |  | Allen Key | | 1009162 |
| | | | | | N |  | Screw in Feet | | 1040162 |

STEP 1 & 2: LEG ASSEMBLY

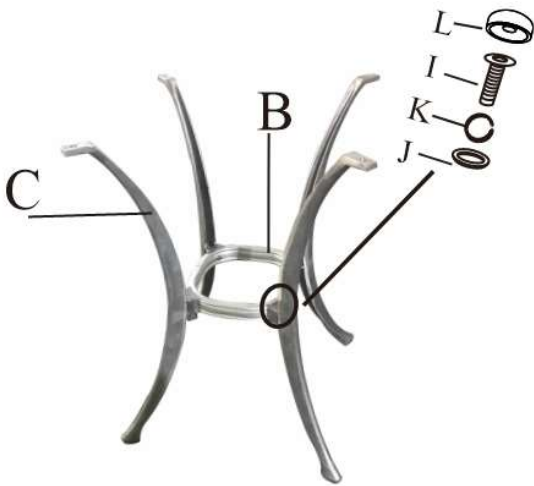


STEP 1: Loosely attach the centre ring (B) to the 4 legs (C). Secure these using bolt (I) M6 flat washer (J), and M6 lock washers (K), DO NOT TIGHTEN THE NUTS AT THIS STAGE.



STEP 2: Turn the table top (A) upside down on a soft, clean surface. Using flat head screwdriver screw the bolts (D) into the table top.

STEP 3: TABLE LEG TABLE TOP ASSEMBLY

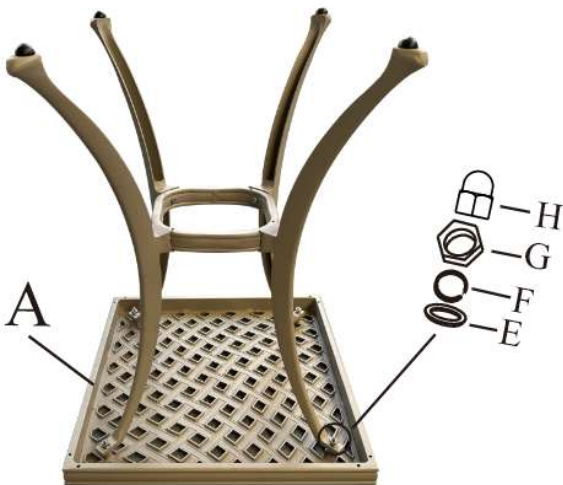

STEP 3: Attach the legs (C) to the table top at the points where the bolts (D) have been placed. Then slide M8 flat washers (E), M8 lock washers (F), and nuts (G) on to the bolt. Tighten all bolts with Allen key (M), taking care not to over tighten as this can cause thread damage. Place PVC covers (L) on all visible bolt heads (I) and nut caps (H) on all visible nuts (G).

STEP 4: TURN TABLE OVER



STEP 4: Turn the table on its legs, you can now use the table.