PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE

ATTENTION:

- Please read these instructions carefully before assembly 1.
- Aluminium is soft metal and over tightening may strip thread or break the part 2.
- 3. DO NOT use power tools
- 4. Please allow 30 minutes for assembly
- 5. Although assembly only requires 1 person it is advised that a second person be present to help turn the product over and into position when fully assembled

ASSEMBLY STEPS:

- 1. LOOSELY attach long side panels (A+ B) to short panels (C) with bolts (G) and big flat washers (J) using spanner (N) DO NOT TIGHTEN BOLTS AT THIS STAGE
- 2. LOOSELY attach base (D) to the already assembled panels (A & B) with bolts (G) and big flat washers (J) using spanner (N) DO NOT TIGHTEN BOLTS AT THIS STAGE
- 3. Tighten all bolts one by one with spanner (N) being careful not to over tighten any as this will cause the thread to become damaged
- 4. Place PVC covers (K) on all visible bolts (F)
- 5. Turn box so the opening is on top.
- Attach waterproof bag (E) to the Velcro inside of the box. Zip bag up.
 Place lid (D) on top of box and using spapper and all using spaper and all using space and all using spaper and all using space and Place lid (D) on top of box and using spanner and allen key attach with bolts (H), locknuts (I) big flat washers (J).
- 8. Cover bolts using PVC covers
- 9. Attach Air pumps (L) to lid (E) by removing the securing clips, insert lid tabs into pump gaps and then reinsert the securing clips.

For more information regarding maintenance of your furniture and to register your warranty, please visit www.hartmanuk.com

Component's Beech REF.68124145 or Ash REF.68152146					Fixings				
Parts List	Parts Picture	Description	QTY	Part no	Parts list	Parts Picture	Description	QT Y	Part no.
Α		Long side panel front	1	68124145A 68152146A	G		M6*45 bolts	18	1131162
В	E	Long Side Panel back	1	68124145B 68152146B	н	C	M6*35 bolts	3	2002172
с		Short Side Panels	2	68124145C 68152146C	1	Ø	M6 locknuts	3	1121162
D		Base	1	68124145D 68152146D	J	0	M6 Big Flat washers	24	1061162
E		Lid	1	68124145E 68152146E	к	\bigcirc	PVC cover	21	2002192
						\bigcirc	Small Dome nut cap	3	2002182
F		Waterproof bag	1	68124145F 68152146F	L	на Стала Стала Стала Стала	Air pump	2	1251163
					м	Ĺ	Allen key	1	2002191
					N	\sum	Spanner	1	1020162

For replacement or lost spare parts please go to http://fag.hartmanuk.co.uk/spares/ Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product


PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE

Hartman

ASSEMBLY INSTRUCTIONS

Heritage Cushion Box With Air Pump

Beech Ref.68124145 or Ash Ref.68152146

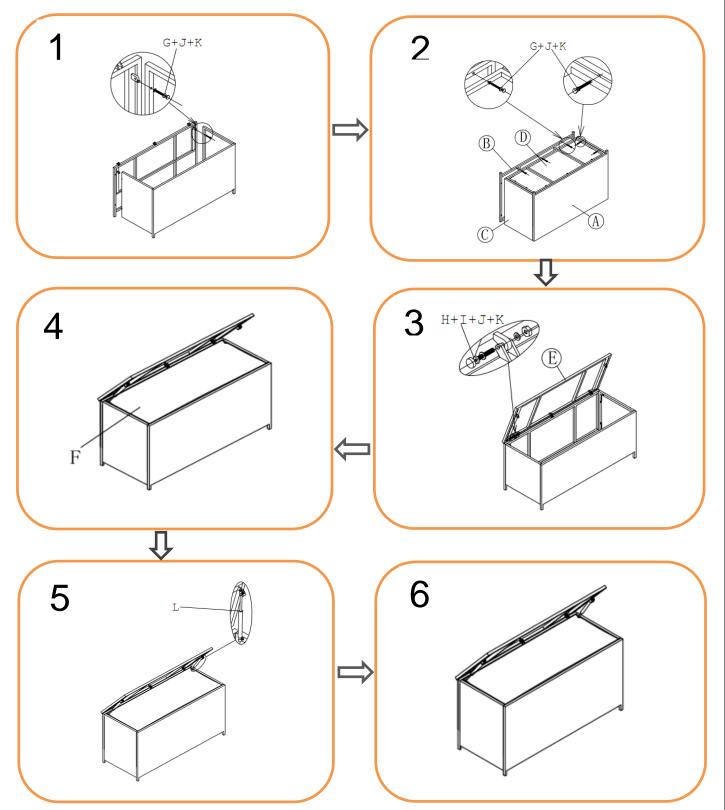

For replacement or lost spare parts please go to <u>http://faq.hartmanuk.co.uk/spares/</u> Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product